

TRIPLE CANDY MACHINE

Wash thoroughly before first use.

Cleaning Instruction:

1. Wash thoroughly with soapy water.
2. Dry using a dry cloth or leave on the drying rack. Make sure all soap is removed before refilling with candy.
3. Not dishwasher safe.

Use Instructions:

1. Remove top (by pulling away from dispenser) to fill each compartment with candy, nuts, etc. For best results fill only half to 2/3 full in each compartment. Works best with smaller, round or uniformly shaped candies.
2. To dispense candy gently press the handle downward (**Do not force the handle to avoid breaking.**). Make sure your hand is underneath the dispenser to catch the candy.
3. The Triple Candy Machine is equipped with a rotating base simply rotate the candy machine to get to your favorite candy.
4. Do not carry the candy dispenser when it is filled with candy.