

monogram[®]
by beurer

Instructions



These instructions are for the Komfort heated mattress cover/ heated under-blanket.



Approved to European Safety Standard EN 60335-2-17

Important instructions

Please read these instructions carefully before you use your heated underblanket, and keep them for future use

Explanation of symbols



Read instructions!



Do not pierce with needles!



Never use if folded, rucked or compressed!



The textiles used for this device meet the stringent human ecological requirements of Oeko Tex Standard 100, as verified by Hohenstein Research Institute.

Introduction

Please read these instructions carefully before you fit this heated underblanket to your bed. We have written the instructions so you can identify the correct fitting instructions for your heated underblanket.

The heated underblanket has been designed to give you a choice of heat settings to warm up your bed, and the option to use it all night so your bed is nice and snug from the moment you get into it and stays cosy all night.

Items included in the package

1 heated underblanket, 1 controller, 1 operating instructions

Important safety information read carefully and keep for later use

Failure to observe the information provided below can lead to personal injury or material damage (electric shock, skin burns, fire). The following safety and hazard information not only serves to protect your health and the health of others, it also protects the product from damage. Therefore, observe this safety information and pass on these instructions together with the product.

- Only use this heated underblanket for the purpose described in these instructions.
- This heated underblanket is not intended for use in hospitals.
- This heated underblanket is not intended for use by persons (including children) with restricted physical, sensory or mental capabilities and/or by persons lacking the required understanding of the equipment and how it is used, unless they are supervised by a person who is responsible for their safety.
- Do not use this heated underblanket for helpless persons, small children or persons insensitive to heat.
- The electric and magnetic fields emitted by this electrical heated underblanket may possibly interfere with the operation of pacemakers. However, they are well below the permissible limits: electric field strength: maximum of 5,000 V/m, magnetic field strength: maximum of 80 A/m, magnetic flux density: maximum of 0.1 millitesla. Please therefore ask your doctor and the manufacturer of your pacemaker before using this product.
- This heated underblanket should
 - only be connected to the voltage specified on the appliance

- only be operated with the switch indicated on the device (label)
- not be switched on if it is folded, rucked or compressed
- not be tucked into the bed or laid around the mattress
- never be wedged (especially with adjustable beds or divided mattresses)
- never have any sharp creases
- never be used with animals
- never be used when damp.
- While this heated underblanket is switched on
 - never place any objects on it (e.g. suitcases or laundry basket)
 - never place any heat source on it, such as a hot water bottle, heating pad etc.
- When in use, the electronic components in the controller of the heated underblanket make the switch slightly warm. The switch should therefore never be covered or placed on the heated underblanket when it is in operation.
- Do not pull, twist or make any sharp kinks in the cables.
- Do not stick pins, needles or any sharp objects into this heated underblanket.
- This heated underblanket may not be used by children unless the switch has been preset by a parent or a supervisory person, or the child has been sufficiently instructed in how to use this heated underblanket safely.
- Children should be supervised to ensure that they do not use the heated underblanket as a toy.
- This heated underblanket must be checked frequently for signs of wear or damage. If there are such signs or if the heated underblanket has been used incorrectly, it must be taken to either the manufacturer or the dealer before further use.
- If the mains connection cable of this electrical heated underblanket is damaged, it must be replaced by the manufacturer, its customer service department or a similarly qualified person to avoid any risk.
- Repairs may only be carried out by specially trained personnel or at an authorised repair workshop, as special tools are required. Incorrect repairs may cause considerable danger to the user.
- Should you still have questions on using our appliances, please contact our customer service.

Proper use

This heated underblanket is designed for warming beds. It is not intended for use in hospitals or for commercial applications. In particular, it may not be used for infants, small children, persons insensitive to heat, helpless persons or animals.

Safety



Your heated underblanket has been designed and fully tested to the European Safety Standards. **sleepsafe**

It has been certified by the Intertek Testing and Certification Ltd. UK and shows the safety mark “BEAB Approved”.

Your heated underblanket is safe and can be used all night (setting “1”).

An electronic sensor mechanism in your heated underblanket protects it from overheating by switching it off automatically if it is faulty.

The safety system constantly monitors the temperature of the heated underblanket. If the heated underblanket reaches a temperature that could be dangerous, the system will turn off the heated underblanket.

Once the safety system has turned off the heated underblanket, the controller will no longer work and you can not reset it. You must return it, with the heated underblanket, to our service department. The address is on the last page of this leaflet.

Although your heated underblanket has this safety system, you must still follow these instructions.

Electrical safety

Your heated underblanket has a UK plug. If your heated underblanket becomes damaged or worn, you should have the plug top replaced by a qualified electrician who understands how to carry out this repair safely.


The plug needs a 3-amp fuse (BS1362 rated).

Before you switch on your heated underblanket for the first time, please check the voltage on the heated underblanket label is the same as the voltage in your home.

Fitting your heated underblanket

Putting into operation

We recommend that you vacuum off your mattress before using the heated underblanket for the first time. Then spread out the heated underblanket flat on your mattress so that the cable entrance is located approximately at shoulder height (see illustration). The head area of the heated underblanket is not heated. Then pull the side section over the sides of your mattress like a contour sheet.

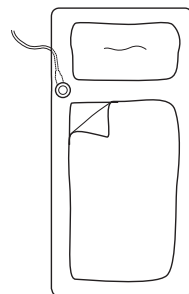

Then secure your contour sheet as accustomed so that the heated underblanket is between your mattress and the contour sheet.

Make sure that the heated underblanket is always spread out flat and does not push together or wrinkle during use. Check its position when making the bed.

The heated underblanket may only be switched on when it is spread out flat. We recommend switching on the heated underblanket approx. 8 minutes before going to bed and covering it with the duvet in order to prevent heat loss. First select the highest temperature setting (level 6). This produces the fastest warming. This heated underblanket may only be operated in conjunction with the switch type specified on the unit.


Attention: The electronic components in the controller will normally warm up slightly when the product is being used. The controller should not lie on or be covered by blankets, pillows etc.

Connecting your heated underblanket

All of our heated underblankets are connected to a controller with a plug and socket, which must be inserted fully before use.

If you have a dual control underblanket there will be two controllers. You need to plug both of them in. Dual control means that you can control each half of the heated underblanket separately.

When removing the plug from the socket, it is important that you do not use the cable to pull them apart.

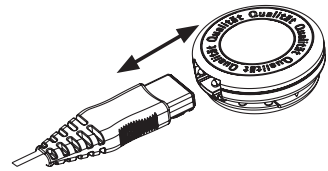

Using your heated underblanket

Your heated underblanket has a preheat facility for your bed which will allow you to change the heat setting of the heated underblanket when you get into bed. The heated underblanket is safe to use all night.

All our heated underblankets have a choice of preheat settings 1 to 6, with 6 being the warmest. Turn the heated underblanket on approx. 8 minutes before you go to bed and choose your favourite setting. Just before you get into bed, you must change the controller to the all-night setting of '1'.


The second slider let you turn the heated underblanket on for one, three, six or 12 hours. Choose the amount of time you want the heated underblanket on for and turn the heated underblanket on to the heat setting you want. Once the heated underblanket has been on for the set time, it will automatically turn itself off. When the timer has worked, the light on the controller will flash.

Please note that it is normal for the controller and wire to become warm when the heated underblanket is on.

To restart the time period, change the controller position to '0' and wait 5 seconds, then turn the heated underblanket to the temperature setting you want.

Turbo preheat will give extra power to your heated underblanket for a set period of time. This will improve the time it takes your heated underblanket to heat up.

The turbo preheat will only work once each time the heated underblanket is switched on. For safety reasons you must switch off the heated underblanket for 8 minutes before you use the turbo again.

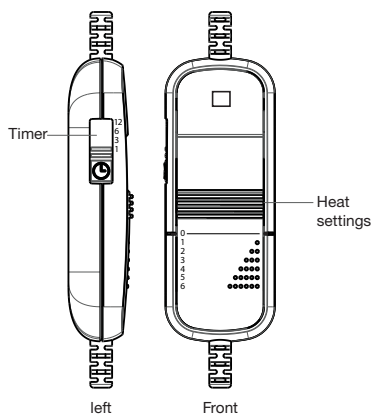

Looking after your heated underblanket

Hand washing

Before cleaning the heated underblanket, always unplug it from the mains and remove the plug-in connection together with the controller from the heated underblanket.

Wash the heated underblanket by hand using a mild washing powder or detergent with fabric conditioner and soak in luke warm water for 15 minutes. After soaking,

squeeze the soapy water out of the heated underblanket and rinse it thoroughly with fresh luke warm water, gently squeezing making sure you do not wring it.

Machine washing

Put the heated underblanket in a large pillow case, duvet cover or similar thin material, or a net bag, and then put it in the washing machine and wash on a wool programme at 30 °C. Use a mild detergent with dosage according to the manufacturer's instructions.

Do not wash the heated underblanket in a top-loading washing machine.



Machine washable at a extra gentle washing program at 30 °C.



Do not bleach.



Use tumble dryer on the lowest heat only.



Do not iron.



Do not dry clean.

When drying, do not use clothes pegs in the wired area of the heated underblanket as they may damage it.

You can spin-dry your heated underblanket or tumble-dry with the tumble dryer on the lowest heat setting only. We recommend to dry it on a clothes drying rack.

Only reconnect the controller to the heated underblanket after the plug connection and the heated underblanket are completely dry. Note that the heated underblanket can suffer from over washing.

It is advised that you should not wash the heated underblanket any more than 5 times in a washing machine.

Please note that the heated underblanket should not be dry-cleaned, wrung out, machine-dried, pressed or ironed.

Never switch on the heated underblanket to dry it.

Never use any clothes pegs or similar to secure the heated underblanket when drying.

Routine checks

Check your heated underblanket regularly to make sure the wired area is not creased.

When you make the bed, check the controller cord is firmly connected to the heated underblanket.

Check the cords and control unit regularly for wear or damage. If there is any, return the heated underblanket and control unit immediately to our service address.

The contact details are at end of this leaflet.

If the supply cord, controller or connector is damaged, it must only be replaced by customer services.

Storing your heated underblanket

The best place to store your heated underblanket in the giftbox that your heated underblanket came in. Do not place anything on top of the folded heated underblanket, don't put sharp creases in the heated underblanket, and do not use moth or insect repellents. Please ensure that you allow the heated underblanket to cool down before storing.

Disposal

Please dispose of the heated underblanket in accordance with the directive 2002/96/EG – WEEE (Waste Electrical and Electronic Equipment). If you have any queries, please refer to the local authorities responsible for waste disposal.



Technical data

| | Type | Supply Voltage | Input |
|-----------------------|------|---------------------|----------|
| Single | W 1 | 230–240V / 50–60 Hz | 65 W |
| Double Single Control | W 2 | 230–240V / 50–60 Hz | 85 W |
| Double Dual Control | W 3 | 230–240V / 50–60 Hz | 2 x 50 W |
| King Size | W 1 | 230–240V / 50–60 Hz | 2 x 65 W |
| Super King Size | W 1 | 230–240V / 50–60 Hz | 2 x 65 W |

Warranty

Our product is guaranteed for 3 years against material defects or flaws.

This guarantee does not apply to:

- damage resulting from improper use
- parts affected by wear and tear
- faults already known to the customer at the time of purchasing the product
- faults of the customer.

The customer's statutory rights are not affected by the guarantee. When putting in a claim under guarantee, the customer must provide proof of purchase. Guarantee claims are to be sent to Service-Address, within a period of 3 years after purchasing the product. Where a claim is justified, the customer has the right to the product being repaired in our own workshop or in a workshop authorised by us.

The customer has no right to further claims (on the basis of the guarantee).

Helpline

Distributors:

(GB) Lifestyle Marketing International Ltd, PO Box 584, Wigan, WNI 9EX,
Tel. 0844 488 9100, Fax 0844 488 9101

(IRL) Bytek Office Systems Limited, Unit 1a Damastown Way, Dublin 15,
Ireland, Tel. + 353 1 8135545, Fax + 353 1 8135520

Manufacturer:

Beurer GmbH
Soeflinger Strasse 218
89077 Ulm/Germany



Website: www.beurer.com

We have a policy of continuously improving product design and quality. We have the right to improve our heated underblanket models at any time.



