



HF 758 DIGITAL ULTRASONIC WARM AND COOL MIST HUMIDIFIER

with Negative Ions



INSTRUCTION MANUAL

HEAVEN FRESH

©2012 HF-Eng CAN | US | UK - HF 758 - 09/13

Thank you for purchasing the innovative Heaven Fresh HF 758 Digital Ultrasonic Warm and Cool Mist Humidifier. We wish you many years of healthy indoor air with this efficient and effective product.

Ensure that all safety precautions are followed when using this electrical appliance for the proper operation of the device. These instructions describe the safety precautions to be observed during operation. They are designed to prevent injuries or damage to this device.

SAFETY PRECAUTIONS

The inner ultrasonic transducer is highly sensitive. Do not touch it with bare fingers or scrape it with metal tools, or it will reduce mist output. When cleaning this area please use a small cleaning brush, cotton swab or tooth brush. Do not use hot water as it may damage the misting parts.

Use proper voltage - AC 110~120V 60Hz in Canada/USA; AC 220~240V 50Hz in Europe. Use of improper voltage may cause fire hazard or electric shock.

To prevent electric shock, do not dismantle, repair or modify this product. Maintenance and cleaning should be followed exactly as instructed in this manual. In the event of a malfunction, please contact an authorized Heaven Fresh maintenance center.

Do not use in areas where flammable or explosive materials are stored.

Do not place this device in direct sunlight or near objects that generate high temperature heat. The heat may cause deformation or warping of the outer casing.

Do not use the humidifier in a room that already has humidity levels above 50% relative humidity. Excessive humidity in the room gives rise to condensation on cold surfaces such as walls or windows.

Do not operate the unit without water in the basin.

Do not insert foreign objects into the device. Do not touch the transducer or the lower water basin when the unit is operating. Do not scratch the transducer. Do not touch the mist output when producing warm mist.

Do not submerge this device in water. Water or cleaning liquids may only be used on parts to be cleaned according to the cleaning and maintenance instructions.

Only use lime scale remover or vinegar to clean mineral deposits from the basin or transducer. Do not use any harsh detergents that may damage the unit.

If you smell an abnormal odour, please turn off and unplug the unit and call Heaven Fresh technical support.

Clean and dry the device before storage (including the removal of all water from the inside of the device). Store the machine in a cool and dry place outside the reach of children.

Do not use fabrics or other materials to cover this device. Obstructed air inlets and outlets will result in improper operation of this unit and may result in fire or other damage.

To prevent interference and damage to other electronic devices, this machine should be placed at least 1 meter away from a computer, television, radio or other electronic equipment.

The ultrasonic humidifier should be cleaned regularly for proper operation and long life. See cleaning instructions.

For safety reasons and to prevent fire or electric shock, unplug the power cord from the electric outlet socket whenever you:

- Do not use the device for a long period of time.
- Remove the tank, clean or service the machine or the filter.
- Move or transport the device.

If the power cord is damaged, then it must be replaced by an authorized service person to prevent electric shock.

WHY HUMIDIFY THE AIR?

When the air is dry, especially in the winter months, it can become unpleasant and even unhealthy, leading to increased levels of static electricity, dry skin, cracked lips and even nose bleeds. Optimal humidity is between 45 to 55% relative humidity. During the winter months though, relative humidity in the average home can drop to below 20%.

Low humidity can lead to a variety of conditions that cause ill health. Dust particles, bacteria, viruses, dust mite feces that are normally trapped by the moist nasal membrane lining in the nose can more easily get into the lungs when the air is dryer and thus reduce the body's natural defense mechanism. These invaders overload the immune system and irritate the mucous membranes resulting in more coughing and susceptibility to disease.

The HF 758 is an ideal ultrasonic humidifier for homes, apartments, offices and anywhere there is low humidity. Ultrasonic water vapour is highly beneficial to individuals. Their biggest advantage is high performance combined with low energy consumption.

HOW DO ULTRASONIC HUMIDIFIERS WORK?

Ultrasonic Humidifiers use ultrasonic high frequency oscillation to break up water into tiny water particles about 1.5 microns in diameter. The ventilation system blows out the water particles into the dry air where they evaporate and create the required humidity level. The water particles appear as a steady stream of mist or fog as they travel up and out of the machine.

HF 758 FEATURES AND BENEFITS

Économique et efficace

- Commande de pulvérisation variable à utiliser selon la taille de la pièce (petite, moyenne, grande)
- Réservoir d'eau de grande capacité 6L à remplir à l'eau du robinet.
- La vaporisation à haut débit peut humidifier rapidement une pièce allant jusqu'à 40 m².
- L'indicateur de réservoir vide vous signale quand il est temps de remplir le réservoir à nouveau.

Advanced Technology

- Advanced digital technology can produce either cold or warm mist.
- Healthy negative ions to purify the air while providing a restful sleep.
- Auto Hygrostat sensor automatically regulates mist output according to desired humidity level.
- Safely and automatically shuts off when it runs out of water.

Hassle Free Operation

- Simple, easy-to-use, one-touch timer control for up to 12 hours of operation.
- Virtually silent operation with advanced ultrasonic technology ensures a quiet and restful sleep.
- Soft glow night light and auto dimming display will keep your bedroom dark for sleeping.


Low Operating costs

- Low energy consumption - can save 85-90% of electricity costs compared to a normal steam humidifier.
- Consumes less power than a 40 watt light bulb.
- Solid state digital controls and ceramic transducer ensure a long product life – 3 Year Warranty.

PRODUCT SPECIFICATIONS

Model:	HF 758
Power supply:	220~240V 50Hz (Europe), 110~120V 60Hz (USA & Canada)
Energy Consumption:	30W (Cool Mist) 100W (Warm Mist)
Water tank capacity:	5L (1.25 US gallons)
Mist Evaporation:	Up to 400 ml/hr.
Room Coverage Area:	40 m ² (430 ft ²)
Noise level:	Low: 30dB(A), High: 35dB(A)
Dimensions (LxWxH):	25 x 13 x 36.2 cm (9.84" x 5.12" x 14.25")
Weight:	2.3 kg (5.07 lbs.)
Warranty:	3 Years Parts and Labour
Safety Certifications:	CE, Rohs, GS

COMPONENTS

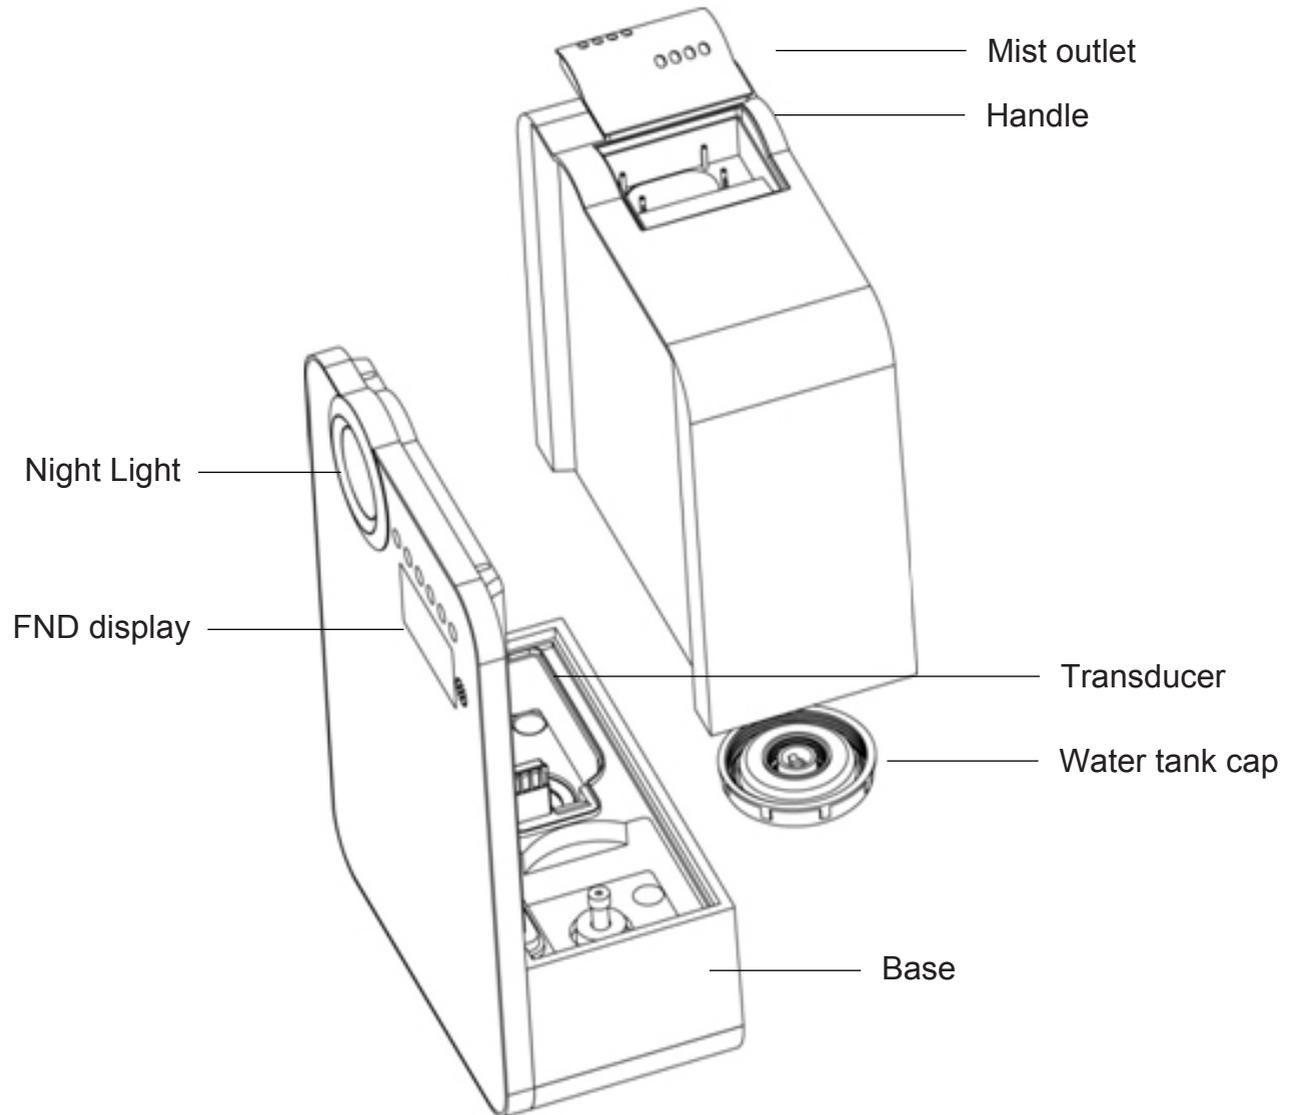


PRE-OPERATING INSTRUCTIONS

- Please make sure the humidifier is switched OFF and disconnected from the electrical outlet.
- Place the humidifier on a flat surface, about 60cm away from the floor and 10cm away from the wall. It is recommended not to place the humidifier on furniture.

Water Tank Filling

- Remove the water tank and lifting straight upward. (See Components)
- Twist off the tank cap located on the bottom of the tank by turning counter clockwise and fill the water tank with cool, fresh water. DO NOT FILL WITH WARM WATER AS THIS MAY CAUSE LEAKING.
- After filling the tank, replace the tank cap by firmly turning clockwise and then replace the water tank on the base. The tank will immediately begin to empty into the base.
- Plug the power cord into a rated electrical outlet.

OPERATING INSTRUCTIONS

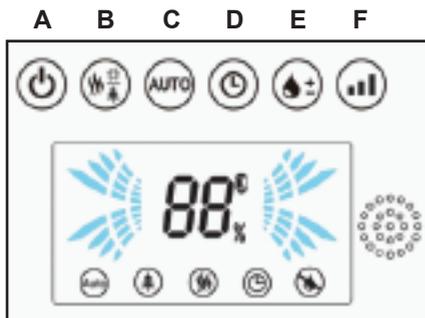

A) ON/OFF switch

Press Button A to turn the humidifier ON and OFF.

B) Warm Mist / Night Light/Ionizer

-1st press: Warm Mist ON and Night Light ON, Ionizer ON

-2nd press: Warm Mist OFF and Night Light ON, Ionizer ON

-3rd Press: Warm mist ON, Night Light OFF, Ionizer OFF.

The default setting is Warm Mist ON and Night Light ON, the humidifier will come back to default setting after the above 3rd press

OPERATING INSTRUCTIONS

C) Auto Humidistat

Pressing Button C will activate the automatic humidity function, then the ideal humidity of 55% is maintained. When the humidity level in the room is less than the auto humidity level (55%), the humidifier will continue to produce moisture automatically. Once the room level is met, the humidifier will turn itself off.

D) Timer setting

Press Button D to determine the operating time, it can be regulated between 1 and 12 hours or for continuous operation.

E) Set humidity

Set the desired humidity in % by pressing Button E. We recommend a relative humidity of between 40% and 60%. The appliance can be regulated from 40% to 75%. If the humidity exceeds the desired setting, the appliance will turn itself off. The appliance will not turn itself off if it has been set for continuous operation ("Co"). The desired value is shown while you are making the selection. After a few seconds, the display automatically switches to the current value.

F) Mist emission setting

Press the Button F to adjust the low, medial and high mist emission. We recommend setting low mist emission for night use.

INFRARED REMOTE CONTROL

HF 758 is equipped with a very useful remote control. The remote control duplicates the six buttons that are mentioned above. You can activate the remote control by removing by removing the protective film from the battery area located at the bottom edge of the unit just below our logo.



TROUBLESHOOTING

The following is a troubleshooting guide to help you solve any issues that may have with the operation of the HF 758.

Trouble	Possible reasons	Solution
Power lamp is off or does not work.	Humidifier is not plugged into the power outlet.	Connect power cord to electrical outlet and press power button.
Power light is on but no mist	No water in water tank.	Fill water tank with water.
The mist has a strange odour.	A new machine.	Remove the water tank, unscrew the lid and let it air out in a cool area for 12 hours.
	It either has dirty water or the water has been stagnant too long.	Clean the water tank and refill with clean water.
Power light is on, but the machine doesn't work.	Too much water in the water basin.	Remove the water tank. Take a small cup and remove some of the water from the machine's water basin. Reinsert the water tank and make sure that it sits properly.
The volume of spray mist is too low.	Too much mineral scale in the water basin.	Clean transducer.
	Water is too dirty or water was kept too long in the tank.	Clean the water tank and refill with clean water.
Abnormal noise	Vibration in the water tank because the water level is too low.	Fill the water tank.
	Machine is on an unstable surface.	Move the unit to a stable flat surface.
Spray mist is coming out of the area around the jets.	There are gaps between the housing around jet nozzles and the top of the water tank.	Remove the jet nozzle from the top of the water tank and clean with a damp cloth. Reattach to the water tank.

TROUBLESHOOTING

The following is not considered faulty operation:

- If your water is very hard (containing abnormally high levels of minerals) the humidifier may produce white dust. This is not a malfunction. The solution would be to clean the filter more often or use softer water.
- If you stand very close to the humidifier, you will hear the gurgling sound of water. This is normal.
- The machine operates very quietly but it is not completely silent. Noise levels less than 35 db is considered normal.

WARNING!

If the above recommended solutions do not work, please contact Heaven Fresh technical support at the telephone number for your region. Do not attempt to disassemble, repair and reassemble the machine as it may void the warranty.

CLEANING AND MAINTENANCE

During winters, the lack of humidity can dry out your skin and cause irritated nasal, frequent colds, sore throats and etc. Humidifiers provide relative humidity to protect our health. To get the most of the benefit from the humidifier and avoid product failure, follow all maintenance instructions carefully. If the recommended care and maintenance guidelines are not followed, micro-organisms may be able to grow in the

DAILY MAINTENANCE

- Before cleaning, turn OFF the unit and unplug it from the electrical outlet.
- Lift off the tank and the housing of the humidifier.
- Carry the water tank to a sink, then drain and rinse the water tank thoroughly to remove any sediment and dirt. Wipe clean and dry with a clean soft cloth or paper towel.
- Refill the water tank with cool tap water as instructed in filling the water tank instructions.

WEEKLY MAINTENANCE

- Repeat steps 1-3 above as mentioned above.
- Fill one cup of white vinegar (about 200ml) to the basin for about 15 minutes, and then wipe off the scale in the basin especially in the transducer with a soft brush.
- Remove the scale and white vinegar solution with a clean soft cloth.

CAUTION

- Make sure main body is never submerged into water.
- Do not use any solvents or aggressive cleaning agents to clean the humidifier.
- Clean the inner parts with a soft cloth.
- Only use the brush to clean the transducer. This should be done once a week.
- Only use the soft-bristle portion of the brush.
- Change the water in the water tank at least once a week if water is standing for more than one

FILTER CARTRIDGE REPLACEMENT

Replace the filter cartridge every 6 months as following instruc-

- Unplug the unit and remove the water tank. Do not touch the water in the base during operation.
- Turn the water tank upside down and unscrew the water tank cap. The filter cartridge is attached to the inside of the cap.
- Remove the old filter cartridge.
- Insert the new filter cartridge into the filter support in the water tank.



DISPOSAL OF THIS DEVICE

At the end of the product life cycle, you should not throw this machine into the normal household garbage but bring the product to a collection point for the recycling of electrical and electronic equipment.



WARRANTY CERTIFICATE

WARRANTY CERTIFICATE FOR HF 758 ULTRASONIC COOL MIST HUMIDIFIER with NEGATIVE IONS

Date of purchase: _____

Customers name: _____

Address: _____

Telephone: _____

Email: _____

Seller's name: _____

Address: _____

1. Please fill in completely this Warranty Certificate. Send it with the invoice and the unit, postage pre-paid and using the original packing box, to your distributor. Make sure to include the appropriate return postage for the package.
2. Please enclose a short description of the damage, fault or malfunction, and the circumstances under which these problems arose.



WARRANTY INFORMATION

Heaven Fresh products are subject to strict quality control before leaving the manufacturer. This allows our customers to benefit from repairs, replacement of parts and even replacements for free.

What is covered: All parts defective in material and workmanship.
For how long: Three years from purchase date.
What we will do: Repair or replace any defective parts.

90-Day Replacement Policy

If, due to manufacturer defect, any part requires repair during the first 90 days after receiving your item, Heaven Fresh will replace it with a new item.

What You Must Do

1. Contact Heaven Fresh customer support at:



1-866-625-1857
www.heavenfresh.ca



1-800-642-0367
www.heavenfresh.com



0800 952 9962
www.heavenfresh.co.uk

for Return Authorization Number.

2. Pack the product in its original carton, and in the same manner in which you received it, or as identical as possible.
3. Include proof of purchase inside box along with the Return Authorization Number.
4. Label and ship the unit, freight pre-paid, to the address provided.

Other Conditions

The provisions of this warranty are in lieu of any other written warranty whether express or implied, written or oral, including any warranty of merchantability or fitness for a particular purpose. The manufacturer's maximum liability shall not exceed the actual purchase price paid by you for the product. In no event shall the manufacturer be liable for special, incidental, consequential, or indirect damages. This warranty does not cover a defect that has resulted from improper or unreasonable use or maintenance, faulty assembly, accident, natural catastrophes, improper packing, or unauthorized tampering, alteration, or modification as determined solely by us. This warranty is void if the label bearing the serial number has been removed or defaced.



Canada

sales@heavenfresh.ca

www.heavenfresh.ca

1-866-625-1857 (English)

1-866-583-1857 (Français)

USA

sales@heavenfresh.com

www.heavenfresh.com

1-800-642-0367

UK

sales@heavenfresh.co.uk

www.heavenfresh.co.uk

0800 952 9962

Germany

sales@heavenfresh.de

www.heavenfresh.de

0800 66 47 259

France

sales@heavenfresh.fr

www.heavenfresh.fr

0800 900 991

Ireland

sales@heavenfresh.ie

www.heavenfresh.ie

1-800-550-457

Middle East

sales@heavenfresh.ae

www.heavenfresh.ae

+971 (06) 557 3640